



Driver Controls

To check your present drive mode, look at the drive mode indicator.

drive mode select switch position	2WD	<i>I</i> - 4WD
drive mode indicator	 The indicator shows a four-wheel drive symbol with the front two wheels crossed out, and the text "LOCK 2WD" below it.	 The indicator shows a four-wheel drive symbol with all four wheels, and the text " <i>I</i> -4WD LOCK" below it.

The drive mode indicator will flash between 2WD mode and *I* - 4WD mode for various conditions.

- The drive mode select switch is in *I* - 4WD mode while the engine is not running.
- A speed difference between front and rear tires is larger than allowed by the control program. (Release the accelerator pedal)
- The system detects a malfunction. (See your dealer)

If the indicators do not go out or come on according to the drive mode, see your dealer.