

Doors

Your Honda SXS is equipped with doors to prevent branches, gravel, or other debris from getting inside the driver's compartment, and to keep the driver's and passenger's legs and feet inside the vehicle if your vehicle ever tips or overturns. Be sure all doors are securely closed before driving your Honda SXS, and never remove a door.

If a door is damaged or does not close securely, see your dealer for repair or replacement.

Do not drive the Honda SXS with the doors open or removed.

The left and right doors can be opened in the same manner.

Open

1. Release the side net buckle.
2. Pull up on the handle.
3. Open the door.

Close

1. Close the door securely until the second latch click is heard.
2. Fasten the side net buckle.
3. Make sure the door is closed securely.

LEFT SIDE (right side similar)

