

Basic Operation

Selecting a Shift Position

Your Honda SXS has five shift select lever positions: park (P), reverse (R), neutral (N), high-range (H), and low-range (L).

P Park:
Used when parking or starting the engine.

R Reverse:
Used when driving in reverse.

N Neutral:
Used when idling the engine during a temporary stop.

H High-range:
Used when driving forward on hard surfaces or with light cargo.

You can switch between AT mode and MT mode by pressing the AT/MT switch. You can also select SPORT mode in AT mode.

L Low-range:
Used when driving forward in the following situations:

- When driving with heavy cargo
- When ascending steep hills
- When driving over large obstacles
- When driving at a constant low speed (5 mph [8 km/h] or below)

You can switch between AT mode and MT mode by pressing the AT/MT switch.

To avoid damaging the transmission, move the shift select lever only when the vehicle is stopped and the engine is idling.