

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
			Initial maintenance	Regular maintenance interval							
ITEMS	FREQUENCY	x100 mi	1	6	12	18	24	30	36	Note	Refer to page
	(Whichever comes first)	x100 km	1.5	10	20	30	40	50	60		
	Hours		20	100	200	300	400	500	600		
	Lubricate all hinges, latches, and pivots					t			t		161
**	Inspect suspension components			t	t	t	t	t	t	3	175
	Inspect drive shaft boots			t	t	t	t	t	t	3	191
	Inspect the following items:										—
	Wheels										190
	Accelerator pedal and brake pedal					t			t		164, 180
	Brake light switch										181
	Exhaust system										171
	Battery terminal condition										193
*	Check shift lever adjustment		t						t		—
	Inspect the following items:										—
**	Tie-rod ends										—
**	Steering gearbox and boots								t		—
*	Brake hoses and lines										—
*	SXS underbody									4	—
*	Inspect evaporative emission control system (USA - 50 states [meets California])										—
	Replace the following items:										—
*	Engine coolant										154
*	Brake fluid										—

- * Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Service Manual (page 260).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.

Note 3 Service more frequently when operated in muddy conditions.

Note 4 Check the underbody whenever the under guard has been hit.