

Front Final Gear Oil

Oil Recommendation

API classification	GL-5 except oils labeled as energy conserving on the circular API service label
type	hypoid gear oil
viscosity (weight)	SAE 80W-90
suggested oil	Honda shaft drive oil or equivalent

Checking Oil

Refer to *Safety Precautions* on page 107.

1. Park your Honda SXS on a firm, level surface. Shift the shift select lever into the park (P) position.
2. Remove the oil fill cap and O-ring.
3. Make sure the oil level is at the lower edge of the oil fill inspection hole.
4. Apply a thin coat of grease to a new O-ring, and insert it into the oil fill cap groove.
5. Install and tighten oil fill cap to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)

LEFT FRONT

