

# Air Cleaner

---

## Clean side

1. Release the clamp.
2. Place a suitable container under the crankcase breather tube plug.
3. Remove the air cleaner housing drain tube plug by removing the clip.
4. Drain the deposits.
5. Reinstall the air cleaner housing drain tube plug, securing it with the clip.
6. Secure the air cleaner housing drain tube with the clamp.

## UNDER LEFT REAR FENDER

