


If a Fuse Blows

All of the electrical circuits on your Honda SXS have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your Honda SXS stops working, the first thing you should check for is a blown fuse.

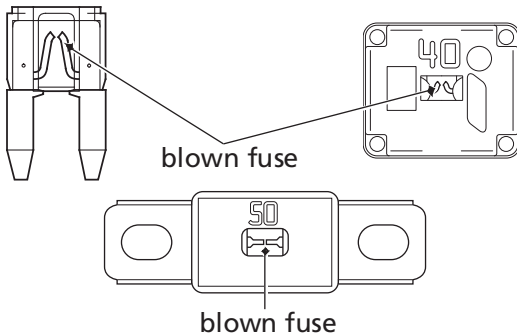

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

The main fuse and circuit fuses are located in the fuse box under the fuse box lid.

The electric power steering (EPS) fuse, brake traction control system (BTCS) fuse and radiator fan fuse are located in the battery cover.

Recommended Fuses

main fuse	50 A
circuit fuses	30 A × 2, 15 A × 1, 10 A × 7
electric power steering (EPS) fuse	40 A
brake traction control (BTCS) fuse	40 A
radiator fan fuse	40 A