


Quick Reference

These symbols are used in Driver Controls section:

SYMBOL	COMPONENT	SEE PAGE
p	START — ignition switch	36
q	ON — ignition switch	36
w	OFF — ignition switch	36
i	Low beam — headlight switch	37
u	High beam — headlight switch	37
P, R, N, H, L	Park — Reverse — Neutral — High — Low — shift select lever	38
	ON — Hill Start Assist (HSA) switch	43
+	Up — right shift paddle	45
-	Down — left shift paddle	45