


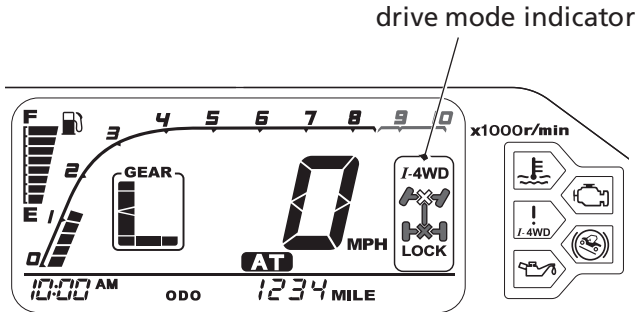

Indicators & Displays

Drive Mode Indicator

The drive mode indicator shows the selected drive mode by pressing the drive mode select switch (page 41, 95).



drive mode select switch position	2WD	<i>I</i> - 4WD
drive mode indicator		

The drive mode indicator will flash between 2WD mode and *I* - 4WD mode for various conditions.

- The drive mode select switch is in *I* - 4WD mode while the engine is not running.
- A speed difference between front and rear tires is larger than allowed by the control program. (Release the accelerator pedal)
- The system detects a malfunction. (See your dealer)