

Driver Controls

Headlight Switch

The headlight switch is located on the left side of the steering wheel, has three positions: OFF, LO and HI.


This switch turns the headlights and taillights on and off, and changes between low beam or high beam.

For example:

To change the headlight position from OFF to HI: press the HI side of headlight switch until you feel two clicks.

To change the headlight position from OFF to LO: press the HI side of headlight switch until you feel one click.

To change the headlight position from HI to LO: press the OFF side of headlight switch until you feel one click.

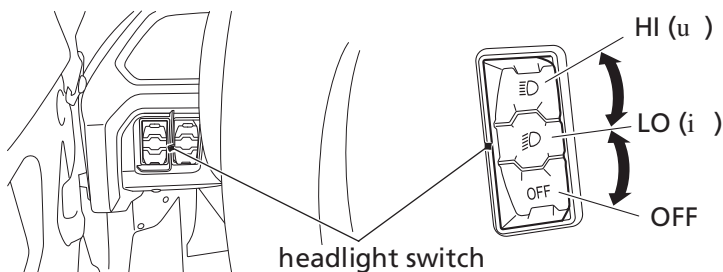

HI (u) → LO (i) → OFF
←--- (u) ←--- (i) ←--- OFF

←--- Press "u" side of headlight switch until you feel one click

→ Press "OFF" side of headlight switch until you feel one click

OFF — The headlights and taillights are off.

LO (i) — The headlights and taillights are on. The headlights are low beam.

HI (u) — The headlights and taillights are on. The headlights are high beam. The high beam indicator in the indicator box comes on (SXS1000S4D only).