

# Driver Controls

---

## FOX® Live Valve (FLV) Switch (SXS1000S4D only)

The FLV switch is located on the left side of the steering wheel, and has two modes: NORMAL mode and SPORT mode.

The FLV switch is used to change between NORMAL mode and SPORT mode of FOX Live Valve (FLV) system.

For more information on FOX Live Valve (FLV) system, see page 181.

