

# Seat

---

## Adjustment

1. Sit down in the driver seat.
2. Pull up on the seat lever to unlock the seat, while pulling up on the seat lever slide the driver seat to your preferred position.  
The driver seat adjustment has 6 positions to select from.
3. Release the seat lever to lock the seat in place.

Once the seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

