

# Sub-Transmission Oil

## Changing Sub-Transmission Oil

Refer to *Safety Precautions* on page 115.

This procedure requires mechanical skill and professional tools such as a torque wrench, and access from underneath the vehicle, as well as the means for disposing of the drained fluid (page 221). If you do not have the skills or the tools, see your dealer.

1. Make sure the Honda SXS is parked on a firm, level surface. Shift the shift select lever into the park (P) position.
  - It may be necessary to jack up and support your Honda SXS to change the sub-transmission oil, see page 133.
2. Remove the oil fill cap/dipstick (page 150).
3. Place an oil drain pan under the sub-transmission oil drain bolt.
4. Remove the sub-transmission oil drain bolt and sealing washer.

