

# Rear Final Gear Oil

---

7. Install the oil check bolt with a new sealing washer and tighten to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**
8. Apply a thin coat of grease to a new O-ring, and insert it into the oil fill cap groove.
9. Install and tighten oil fill cap to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**
10. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 221).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

### RIGHT REAR

