

Air Cleaner

Replacing Air Cleaner

NOTICE


Clean the air cleaner housing cover prior to removal.

Remove the air cleaner to the right side.

When removing the air cleaner, be careful not to allow foreign objects to drop into the air intake ducts.

1. Remove the air cleaner outer cover (page 131).
2. Clean the air cleaner housing cover.
3. Unlatch the retainer clips and remove the air cleaner housing cover and cover seal.

IN FRONT OF CARGO BED

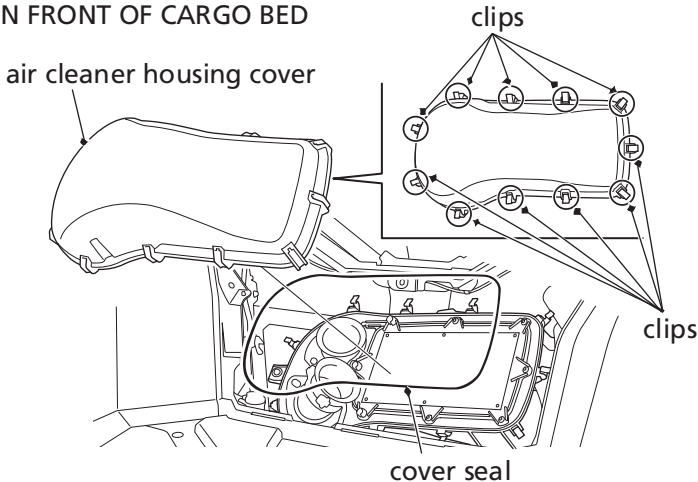

4. Pull the air cleaner out to the right side by loosening the screws A and removing the screws B and collars.
When removing the air cleaner, be careful not to allow foreign objects to drop into the air intake ducts and air cleaner housing.

(cont'd)