

If a Fuse Blows

Main & Circuit Fuses

1. To prevent an accidental short circuit, turn the ignition switch OFF (w) before checking or replacing fuses.
2. Pull the top of fuse box lid out to release its prong from the grommet.
3. Pivot the fuse box lid down.
Be careful not to damage the rear passenger seat surfaces while removing the fuse box lid.
4. Remove the fuse box lid by releasing its tabs from the slit.

BETWEEN REAR PASSENGER SEATS

