

Instruments & Controls

The items listed below are described in this section.

Operation Component Locations	13
Indicators & Displays	16
Neutral Indicator	17
Reverse Indicator	17
Parking Brake Indicator	17
High Coolant Temperature Indicator	17
PGM-FI Malfunction Indicator Lamp (MIL)	17
Seat Belt Indicator	17
Multi-function Display	20
Speedometer Display	21
Odometer Display	22
Gear Position Display	31
Driver Controls	32
Ignition Switch	32
Headlight Switch	33
AT/MT Switch	34
Shift Paddles	35
Drive Mode Select Lever	36
Reverse Lever	38
Parking Brake Lever	39
Doors	40
Side Nets	41
Seat	43
Seat	43

(cont'd)