

Driver Controls

Headlight Switch

The headlight switch is located on the front console, to the right side of the steering wheel. This switch turns the headlights and taillight on and off.

