

Driver Controls

AT/MT Switch

The AT/MT switch is located to the right of the drive mode select lever.

The AT/MT switch has two positions, AT (automatic shift mode) and MT (manual shift mode).

To select the transmission mode, turn the AT/MT switch to the desired position.

See *Shifting Gears*, page 68.

