


Driver Controls

Drive Mode Select Lever

The drive mode select lever, located to the right of the ignition switch, has two drive mode positions: 2WD and 4WD.

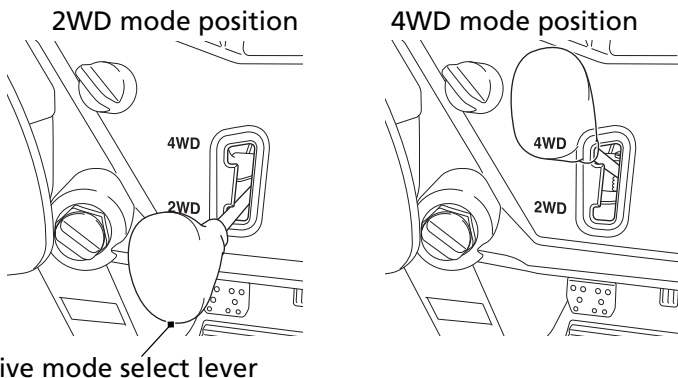

To check your present drive mode, look at the 4WD indicator.

2WD mode:

The 4WD indicator will be off when the 2WD mode is engaged.

4WD mode:

The 4WD indicator will be on when the 4WD mode is engaged.

