
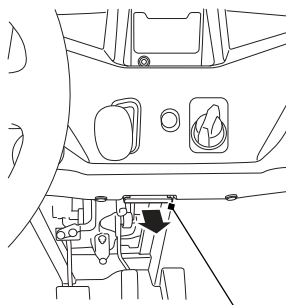


Driver Controls

Reverse Lever

The reverse lever is located in the center of the lower dash. To operate, bring the SXS to a complete stop (the transmission cannot be shifted into reverse if the SXS is moving). Make sure the transmission is in neutral. While pulling the reverse lever and depressing the brake pedal, pull the downshift paddle (left handle shift paddle) once to shift into "R" (reverse) gear. See *Driving in Reverse*, page 74.

downshift paddle

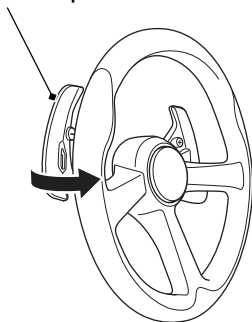

reverse lever