

Basic Operation

To stop the engine, turn the ignition switch to the OFF (O) position. Remember to apply the parking brake and remove the key if you plan to leave the vehicle.

Shifting Gears

Selecting a AT/MT Mode

Your SXS has two transmission modes: AT and MT. You can select the desired shift mode with the AT/MT switch.

AT mode

This mode automatically shifts the gears with optimal timing according to your driving conditions.

The gear position indicator shows “D” for forward gears, “N” for neutral, and “R” for reverse. Select gear position with the right side upshift paddle and left side downshift paddle.

You can temporarily shift up or down by operating the shift paddles while driving in AT mode. At the same time, the shifted gear is shown on the gear position indicator.

