


Seat Back Removal

Refer to *Safety Precautions* on page 91.

The seat back must be removed for spark plug maintenance, to change the engine oil filter, to clean the air cleaner, to remove the center rear panel.

Removal

1. Open the doors (page 40).
2. Pull the bottom of seat back forward then slide it slightly downward.

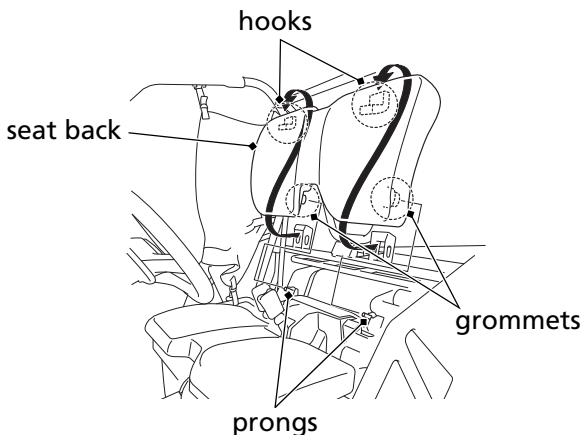

Installation

Insert the hooks into the frame and the prongs into the grommets of the seat back.