

Engine Oil & Filter

12. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)
13. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 188).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

14. Install the right seat bottom cover by flipping it back. Install the clips. Install the screws and tighten them to the specified torque:
5.9 lbf·ft (8 N·m, 0.8 kgf·m)
15. Install the center rear panel.
16. Install the seat back.