


# Spark Plug

---

6. Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped.
7. Using a wire-type feeler gauge, check the spark plug gap. If adjustment is necessary, bend the side electrode carefully.  
The gap should be:  
**0.039 – 0.043 in (1.00 – 1.10 mm)**

## UNDER SEAT BACK CENTER

spark plug cap

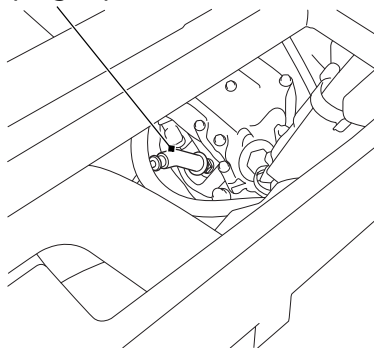

spark plug gap  
0.039 – 0.043 in  
(1.00 – 1.10 mm)

