

Driver Controls

AT/MT Switch (SXS700M2D/M4D only)

The AT/MT switch is located to the left of the shift select lever. The AT/MT switch has two positions, AT (automatic shift mode) and MT (manual shift mode).

To select the transmission mode, turn the AT/MT switch to the desired position.

See *Shifting Gears* page 84.

