


Driver Controls


Parking Brake Lever

The parking brake lever is located to the left of the steering wheel. To apply the brake, pull the lever down fully. To release it, pull down slightly, push the button at the end of the lever, then push lever forward.

parking brake lever

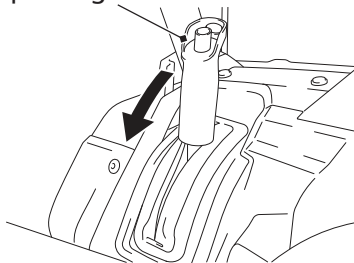

TO APPLY
THE PARKING BRAKE

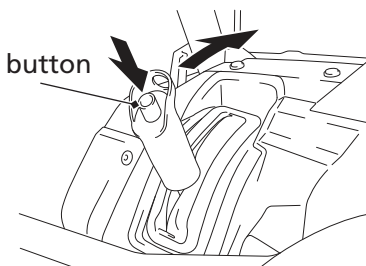

TO RELEASE
THE PARKING BRAKE

NOTICE

Driving with the parking brake on can damage the rear brake and drivetrain.