

Front Hood

Refer to *Safety Precautions* on page 105.

The front hood must be removed to replace a fuse, to lubricate the drive mode select lever pivot and shift select lever pivot, brake light switch adjustment and throttle cable adjustment, to check the coolant level and for washing the radiator fan area.

Removal

1. Turn the knobs clockwise.
2. Remove the front hood.

Installation

1. Insert the hooks into the slots.
2. Turn the knobs counterclockwise.

