

Air Guide Plate Removal

Refer to *Safety Precautions* on page 105.

The air guide plate must be removed to adjust the brake light switch and throttle cable.

Removal

1. Remove the front hood (page 119).
2. Remove the clips (page 121).
3. Pull out the clamp while pressing both side of the anchor.
4. Remove the air guide plate.

Installation

1. Insert the prongs into the frame.
2. Install the clamp until it seats properly.
3. Install the clips.
4. Install the front hood.

