


Seat Removal

Refer to *Safety Precautions* on page 105.

The front seat must be removed for spark plug maintenance, main fuse maintenance, battery maintenance, to check the engine oil level, to add engine oil, to change the engine oil filter, and to access the tool kit.

Removal

1. Open the doors (page 41).
2. Pull the front of the front seat upward then slide it slightly forward.

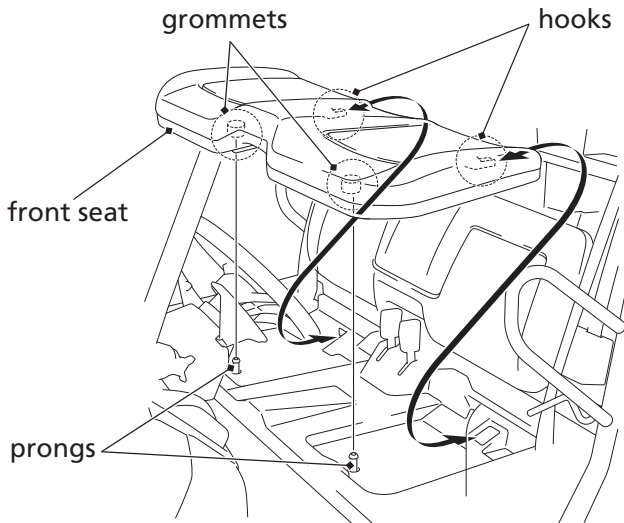

Installation

Insert the hooks into the frame and the prongs into the grommets of the front seat.