

Jack Up Point & Support Point

Refer to *Safety Precautions* on page 105.

When jacking up and supporting this vehicle, the following jack-up points and support points should be used.

3 WARNING

The vehicle can easily roll off a jack, seriously injuring anyone underneath.

Follow the directions for changing a tire exactly, and never get under the vehicle when it is supported only by the jack.

When using a jack, always abide by the following instructions.

- Do not leave the engine running.
- Move the drive mode select lever into 4WD Diff Lock position and set the parking brake securely.
- Use only on a firm level surface.
- Place a jack only at the specified jack-up point.
- Do not leave any person or cargo in the vehicle.
- Do not place any object above or under a jack.

