

Air Cleaner


Cleaning

1. Lift the cargo bed (page 66).
2. (SXS700M4/M4D only)
Remove the rear center cover.
3. Unlatch the retainer clips.
4. Remove the air cleaner housing cover.


UNDER CARGO BED

(SXS700M4/M4D only)

rear center cover

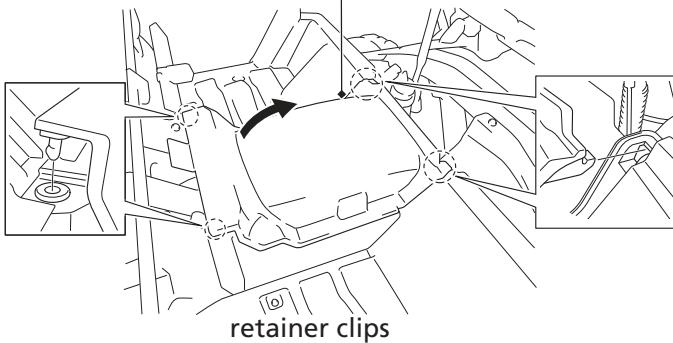

retainer clips

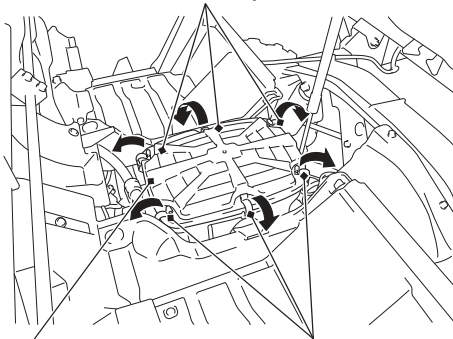

air cleaner housing cover

retainer clips

(cont'd)