

If a Fuse Blows

Circuit Fuse Access

5. To access the circuit fuse, remove the front hood (page 119).
6. Remove the fuse box cover, then open the fuse cover.
7. To check or replace a circuit fuse, pull the old fuse out. If the fuse is blown, replace it with a spare fuse of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

8. Install the fuse cover and fuse box cover.
9. Install the front hood.

