

# If a Fuse Blows

## *Electric Power Steering (EPS) Fuse Access (SXS700M2DIM4D only)*

1. Turn the ignition switch to OFF (w) before checking the fuse.
2. Remove the front seat (page 122) and right side rubber cover.
3. To access the EPS fuse, remove the fuse cover.  
If the EPS fuse is blown, see your dealer for this service.
4. Reinstall the right side rubber cover and front seat.

### UNDER SEAT

