

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇨	INITIAL		REGULAR		Refer to page
			MAINT.		MAINT. INTERVAL		
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
*	FUEL LINE				I		—
*	THROTTLE OPERATION				I		109
*	CARBURETOR CHOKE				I		111
	AIR CLEANER	NOTE 1			C	C	104
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	108
	SPARK PLUG				I	I	115
*	VALVE CLEARANCE			I	I	I	118
	ENGINE OIL			INITIAL = 100mi (150km), 20 operating hours or 1 month : R REGULAR = Every 600mi (1000km), 100 operating hours or 12 months : R			96
**	ENGINE OIL STRAINER SCREEN					C	—
**	ENGINE OIL CENTRIFUGAL FILTER					C	—
*	ENGINE IDLE SPEED			I	I	I	114

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 198).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.