

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines ([page 188](#)).

For information about carburetor adjustment for riding at high altitude, see [page 189](#).

Safe Riding Precautions	45
Off-road Use Only.....	45
Keep Hands and Feet on Controls.....	46
Control Speed	47
Use Care on Unfamiliar or Rough Terrain	48
Do Not Perform Stunts.....	49
Starting & Stopping the Engine.....	50
Preparation.....	50
Starting Procedure	51
Flooded Engine.....	54
How to Stop the Engine.....	54
Using the Recoil Starter.....	55
Shifting Gears.....	56
Riding in Reverse	59

(cont'd)