

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL	REGULAR		Refer to page		
			MAINT.	MAINT. INTERVAL				
			⇨	mi	100		600	1200
				km	150		1000	2000
				MONTH	1		6	12
	NOTE	HOURS	20	100	200			
*	FUEL LINE				I	—		
*	THROTTLE OPERATION				I	109		
*	CARBURETOR CHOKE				I	111		
	AIR CLEANER	NOTE 1			C	C	104	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	108	
	SPARK PLUG				I	I	115	
*	VALVE CLEARANCE			I	I	I	118	
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		96		
**	ENGINE OIL STRAINER SCREEN				C	—		
**	ENGINE OIL CENTRIFUGAL FILTER				C	—		
*	ENGINE IDLE SPEED			I	I	I	114	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 198).

** In the interest of safety, we recommend these items be serviced only by your dealer.