



# If You Have a Flat Tire

## Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on [page 77](#).

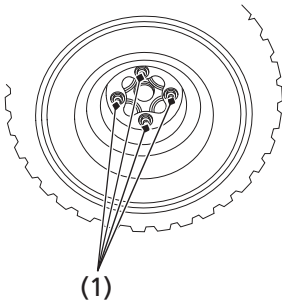

(1) wheel nuts

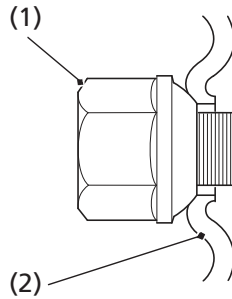

(2) wheel rim

### Removal

1. Park your ATV on a firm, level surface.
2. Loosen — but do not remove — the wheel nuts (1).
3. Raise the front (or rear) wheels off the ground and place a support block under the vehicle.
4. Remove the wheel nuts.
5. Remove the wheel.