
## **Vehicle Identification**

## **Serial Numbers**

The VIN and engine serial number may be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of this manual.


The VIN (1) is stamped on the front of the frame.

## **FRONT**

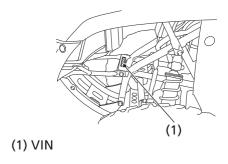

The engine number (2) is stamped on the right side of crankcase.

## **RIGHT SIDE**

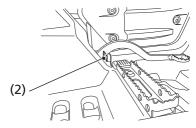

(2) engine number