

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page	
			mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
		NOTE	HOURS	20	100	200		
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)	I	100	
*	BRAKE FLUID	NOTE 3				I	118	
*	BRAKE SHOE WEAR	NOTE 1				I	130	
*	BRAKE LIGHT SWITCH			I	I	I	131	
	BRAKE SYSTEM			I	I	I	118	
*	REVERSE INHIBITOR SYSTEM			I	I	I	111	
	GUARDS					I	139	
*	CLUTCH SYSTEM			I	I	I	110	
*	SUSPENSION					I	—	
*	SPARK ARRESTER					C	C	117
*	NUTS, BOLTS, FASTENERS			I		I	—	
**	WHEELS/TIRES			I	I	I	133	
**	TIE-ROD AND JOINT BOOTS			I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS					I	—	
**	STEERING SYSTEM					I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.