

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | FREQUENCY | WHICHEVER COMES FIRST ⇨ | INITIAL MAINT. | | REGULAR MAINT. INTERVAL | | Refer to page |
|-------|-----------------------------------|----------------------------------|----------------|--|-------------------------|------|---------------|
| | | | mi | 100 | 600 | 1200 | |
| | | | km | 150 | 1000 | 2000 | |
| | | | MONTH | 1 | 6 | 12 | |
| NOTE | | HOURS | 20 | 100 | 200 | | |
| * | FUEL LINE | | | | | I | — |
| * | THROTTLE OPERATION | | | | | I | 103 |
| * | CARBURETOR CHOKE | | | | | I | 105 |
| | AIR CLEANER | NOTE 1 | | | | C | 98 |
| | AIR CLEANER HOUSING DRAIN TUBE | NOTE 2 | | | | I I | 102 |
| | SPARK PLUG | | | | | I I | 112 |
| * | VALVE CLEARANCE | | | I | I | I | 115 |
| | ENGINE OIL | | | INITIAL = 100mi (150km), 20 operating hours or 1 month: R REGULAR = Every 600mi (1000 km), 100 operating hours or 12 months: R | | | 90 |
| ** | ENGINE OIL STRAINER SCREEN | | | | | C | — |
| ** | ENGINE OIL CENTRIFUGAL FILTER | | | | | C | — |
| * | ENGINE IDLE SPEED | | | I | I | I | 111 |

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 188).

** In the interest of safety, we recommend these items be serviced only by your dealer.