


Brakes

4. Push down the parking brake pin (4) and then squeeze the clutch lever/parking brake lever (5) until firm resistance is felt. Measure the distance the clutch lever/parking brake lever has moved; the distance should be:

9/16 – 13/16 in (15 – 20 mm)

LEFT HANDLEBAR

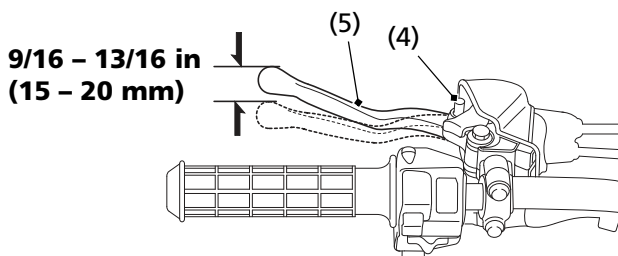

(4) parking brake pin

(5) clutch lever/parking brake lever

5. After parking brake adjustment is completed, adjust the clutch freeplay to the correct specification ([page 106](#)).

Check the clutch lever/parking brake lever and parking brake cable for loose connections or other damages. If the parking brake cable is worn or kinked, have it replaced by your dealer.

Other Inspections & Lubrication

- Check that the clutch lever/parking brake lever assembly is positioned properly and the securing bolts are tight.
- Check the parking brake cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the parking brake cable with a commercially available cable lubricant to prevent premature wear and corrosion.