## Tires

Tread Wear

Also, if you hit a pothole or other hard object while riding, stop as soon as you safely can and carefully inspect the tires for damage.

Front (1) 3/16 in (4 mm) NEW ÌÒ Replace 10 (3) (2) Rear 100 NEW Ø Replace 3/16 in (4 mm) (1) (1) groove depth (3) wear indicator location mark (2) wear indicator

To check the condition of a tire tread, measure the groove depth (1) in the center of the tire, or check the wear indicator (2). For best performance, you should replace a tire before the tread depth at the center reaches the following limits:

front	3/16 in (4 mm)
rear	3/16 in (4 mm)

## 132 Servicing Your Honda