If Your Engine Quits or Won't Start

| SYMPTOM: Starter motor doesn't operate. | |
|---|---------------------------------|
| POSSIBLE CAUSE | WHAT TO DO |
| ignition switch OFF | Turn the ignition switch ON. |
| transmission not in | Shift into neutral. |
| neutral | |
| blown fuse | Replace with a new fuse of the |
| | same rating (page 167). |
| battery lead loose | Tighten the battery lead. |
| low (or dead) battery | Charge the battery (page 140). |
| | If charging doesn't help, see |
| | your dealer. |
| faulty starter motor | If all possible causes are |
| | negative, the starter motor |
| | may be faulty. See your dealer. |

| SYMPTOM: Starter motor works, but the engine won't start. | |
|---|---|
| POSSIBLE CAUSE | WHAT TO DO |
| engine stop switch OFF | Turn the engine stop switch to RUN. |
| out of fuel | Fill the fuel tank. |
| flooded engine | See Flooded Engine (page 50). |
| loose or unconnected | Install the spark plug cap |
| spark plug cap | securely. If the engine still |
| | won't start, see your dealer. |
| loose battery cables | Tighten the battery terminal bolts. |
| weak battery | Charge the battery (page 140). If charging doesn't help, see your dealer. |