

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	600	1200	
			km	1000	2000	
		MONTH	1	12		
NOTE	HOURS	20	100	200		
	REAR FINAL GEAR CASE OIL			(R: EVERY 2 YEARS)	I	97
*	BRAKE FLUID	NOTE 3			I	119
*	BRAKE SHOE WEAR	NOTE 1			I	125
*	BRAKE PAD WEAR	NOTE 1, 2			I	122
*	BRAKE LIGHT SWITCH		I	I	I	128
	BRAKE SYSTEM		I	I	I	119
*	REVERSE INHIBITOR SYSTEM		I	I	I	111
	GUARDS			I	I	136
*	CLUTCH SYSTEM		I	I	I	107
*	SUSPENSION			I	I	—
*	SPARK ARRESTER			C	C	117
*	NUTS, BOLTS, FASTENERS		I		I	—
**	WHEELS/TIRES		I	I	I	—
**	TIE-ROD AND JOINT BOOTS		I	I	I	—
**	STEERING SHAFT HOLDER BEARING				I	—
**	STEERING SYSTEM				I	—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Service Manual (page 192).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.