


# If a Fuse Blows

---

## Main Fuse Access

### UNDER SEAT

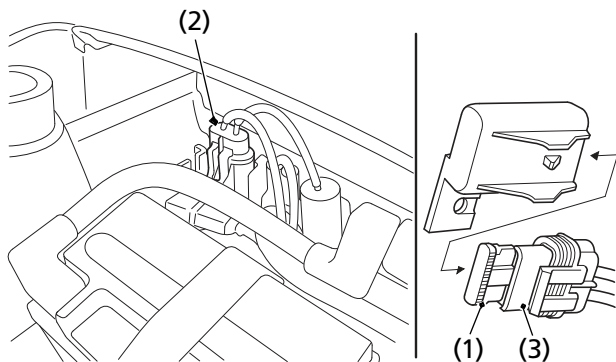

(1) fuse

(3) fuse holder

(2) fuse holder assembly

1. To prevent an accidental short circuit, turn the ignition switch OFF (w) before checking or replacing the fuse.
2. To access the fuse (1), remove the seat (page 90).
3. Remove the fuse holder assembly (2).
4. Pull the old fuse out of the fuse holder (3).
5. Push the new fuse into the fuse holder.