


Tank Cover Assembly Removal

Refer to *Safety Precautions* on [page 107](#).

The tank cover assembly must be removed for the engine oil, engine oil filter and spark plug maintenance.

RIGHT SIDE

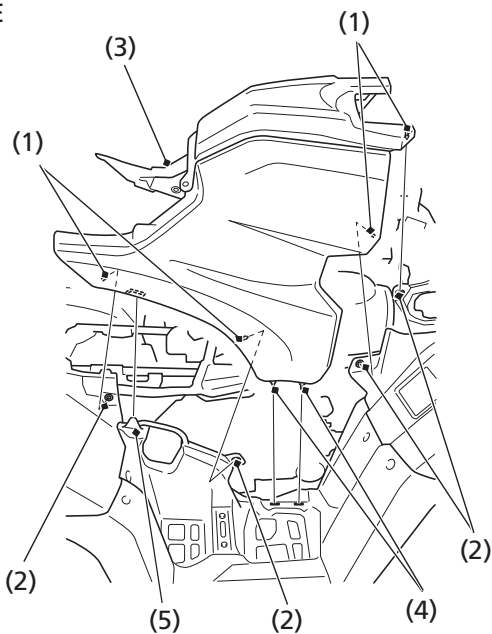

(1) prongs

(4) tabs A

(2) grommets

(5) tabs B

(3) tank cover assembly

Removal

1. Remove the seat ([page 118](#)).
2. Remove the prongs (1) from the grommets (2).
3. Remove the tank cover assembly (3) by releasing the tabs A (4) and tabs B (5).