

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
	NOTE	HOURS	20	100	200		
	DRIVETRAIN BOOTS						182
	FRONT/ REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)		134, 137
*	2WD/4WD SELECT SYSTEM						—
*	BRAKE FLUID	NOTE 3					163
*	BRAKE PADS WEAR	NOTE 1, 2					167
*	BRAKE LIGHT SWITCH						171
	BRAKE SYSTEM						163
*	REVERSE INHIBITOR SYSTEM						154
	GUARDS						179
*	SUSPENSION						160
*	SPARK ARRESTER				C	C	159
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						172
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

- * Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual ([page 246](#)).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.