


Rear Final Gear Oil

1. Park your ATV on a firm, level surface.

REAR

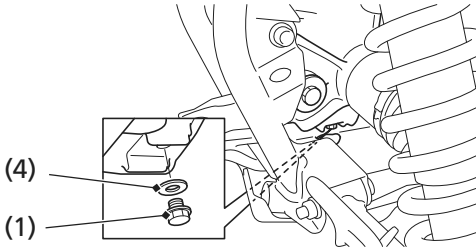


(1) oil drain bolt

(4) sealing washer

2. Place an oil drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), O-ring (3), drain bolt and sealing washer (4).

REAR

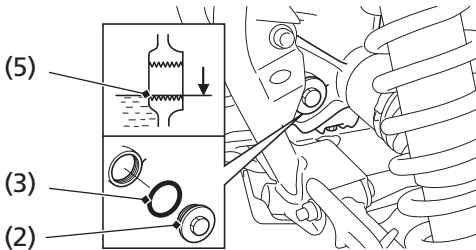

(2) oil fill cap

(5) oil fill inspection hole

(3) O-ring

4. After the oil has completely drained, reinstall the drain bolt with a new sealing washer and tighten it to the specified torque:
9 lbf·ft (12 N·m , 1.2 kgf·m)

(cont'd)