

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | | FREQUENCY | WHICHEVER COMES FIRST ⇒ | INITIAL | REGULAR | | Refer to page | |
|-------|-----------------------------------|-----------|-----------------------------------|--|-----------------|------|------------------|------|
| | | | | MAINT. | MAINT. INTERVAL | | | |
| | | | | mi | 100 | 600 | | 1200 |
| | | | | km | 150 | 1000 | | 2000 |
| | | MONTH | 1 | 6 | 12 | | | |
| NOTE | | HOURS | 20 | 100 | 200 | | | |
| * | FUEL LINE | | | | | I | — | |
| * | THROTTLE OPERATION | | | | | I | 152 | |
| | AIR CLEANER | NOTE 1 | | | C | C | 146 | |
| | AIR CLEANER HOUSING DRAIN TUBE | NOTE 2 | | | I | I | 151 | |
| | SPARK PLUG | | | | I | I | 155 | |
| * | VALVE CLEARANCE | | | I | I | I | 158 | |
| | ENGINE OIL | | | INITIAL= 100 mi (150km), 20 operating hours or 1 month: R | | | 126 | |
| | ENGINE OIL FILTER | | | REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R | | | 131 | |
| | RADIATOR COOLANT | NOTE 3 | | | I | I | 139 | |
| * | COOLING SYSTEM | NOTE 2 | | | I | I | — | |

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 246).